



CODE DISPLAYED	FAULT	REMEDY
60	Ignition Failure	Check that gas is turned ON. Service call if repeated.
LO	Flame Failure	Check that gas is turned ON. Service call if repeated.
68	Overheat	Clean filter. Service call if repeated. [1]
HI	Room Overheat	Lower room temperature to less than 104°F (40°C).
72 76	Room Temperature Sensor Faulty	Service call.
76 80		
64 68 72	Overheat Temperature Sensor Faulty	Service call.
68 72 76		
LO 60 64	Sparker Failure	Service call.
60 64 68	Combustion Fan Failure	Service call.
64 68	Faulty ON/OFF Switch	Service call.
LO 60	Faulty Solenoids	Service call.
80	Faulty Flame Rod	Service call.
72 76 80 HI	Communication Error	Turn heater OFF, then ON again.
60 64 68 72 76	Flue Block	Check around the flue terminal for blockage. [2]

[1] Remove any obstructions. The flue needs to be kept clear to expel exhaust gases. If the appliance fails to operate contact a qualified service agency.

[2] If the fusible link needs replacement, it must be done by a qualified service agency. In addition, the cause of the overheat needs to be determined. The fusible link is a one use safety device that breaks to shut off the appliance.