8

7

## Note:

D

С

В

А

Reference Rinnai Circ-Logic Guide for Rinnai Circ-Logic description and installation instructions

Pump should be sized to maintain circulation loop temperature.

Pump should be sized to overcome the pressure loss through the tankless water heater, supply, and return plumbing. Reference the Rinnai Hot Water System Design Manualfor pump sizing guidelines.

Pump should be of bronze or stainless construction.

PVA to remain at factory default setting. Circulation unit should not be connected electronically to MSB Controller or EZConnect<sup>™</sup> Cable.

> 3/4" Return Line Minimum Recommended



8